GASTROBACK®

Operation instructions

DESIGN BISTRO OVEN

Art.-Nr. 42810 Design Bistro Oven

Knowing Your Design Bistro Oven

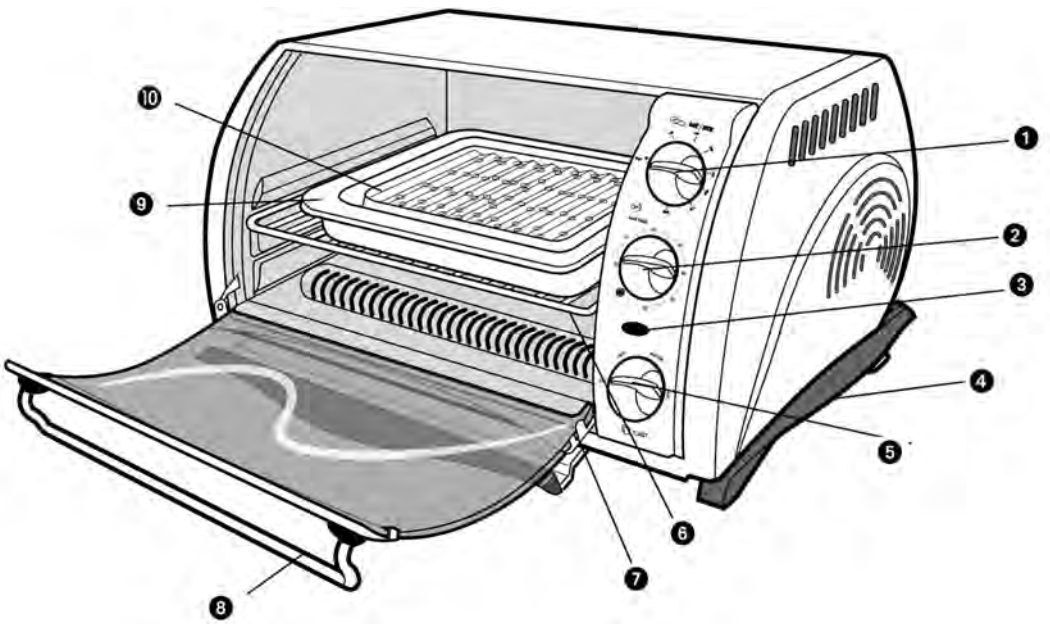

1. Toast and Bake/Broil functioning control
2. 60-minute bake timer
3. On indicator light
4. Side handle
5. Toast browning control
6. Slide rack
7. Slide-out crumb tray
8. Door handle
9. Bake pan
10. Broil rack
11. Extra-deep curved interior

With the Design Bistro Oven you can easily toast, broil and bake your food. The Design Bistro Oven has a practical application for multifunctional purposes. Setting the toast browning control you achieve best results in browning your food to suit your taste.

Important Safeguards

Carefully read all instructions before operating this appliance and save the instructions for further reference. Do not attempt to use this appliance for any other than the intended use, described in these instructions. Any other use, especially misuse, can cause severe injuries or damage by electric shock, heat or fire.

Any operation, repair and technical maintenance of the appliance or any part of it other than described in these instructions may only be performed at an authorised service centre. Please contact your vendor.

Important Safeguards for Daily Operation

• **This appliance is for household use only** and NOT intended for use in moving vehicles. Do not operate or store the appliance in humid or wet areas or outdoors. Do not attempt to operate the appliance using any parts or accessories not recommended by the manufacturer.

• Check the entire appliance regularly for proper operation–especially the power cord. The pins of the power cord must be clean, smooth, and without discolouration. Do not operate the appliance, when the appliance or any part of it is likely to be damaged, to avoid risk of fire, electric shock or any other damage or injuries to persons. The appliance is likely to be damaged if the appliance was subject to inadmissible strain (i.e. overheating, mechanical or electric shock, moisture) or if there are any cracks, excessively frayed parts, or distortions. In this case, immediately unplug the appliance and return the entire appliance (including all parts and accessories) to an authorised service centre for examination and repair.

• Food can catch fire, when overheated! During operation keep the appliance in an appropriate distance of at least 20 cm on each side to furniture, walls, boards, curtains and other objects. Do not operate the appliance near inflammable liquids (i.e. high-proof alcohol) or beneath any heat-sensitive or moisture-sensitive materials or beneath boards or drop-lights to avoid damage caused by steam, condensate or fire. Do not store any items on top of the appliance when operating. Do not store any material, other than manufacturer´s recommended accessories, in this oven when not in use. Before operating, always ensure that there are no foreign objects in the Design Bistro Oven. Do not insert wrapped foods (i.e. kitchen foil) or oversized food, to avoid risk of fire, electric shock, and damage. Do not place any of the following materials in the oven: paper, cardboard, plastic wrap, and the like. **Immediately unplug the appliance, if there is any kind of malfunction or problem** (i.e. overheating or smoke is coming out of the Design Bistro Oven). Extreme

caution should be used, when using containers constructed of other than ceramics or glass.

• Do not cover crumb tray or any other parts of the oven with metal foil. This will cause overheating of the oven.

• Do not clean with metal sourcing pads. Pieces can break off the pads and touch electrical parts resulting in a risk of electrical shock.

• Close supervision is necessary when the appliance is used near young children. Do not let young children play with any parts of the appliance. The appliance is not intended for use by children or infirm persons without supervision. For storage always keep the entire appliance dry and clean and where young children cannot reach it. Do not place any hard and/or heavy objects on the appliance or on any parts of it.

• Operate the appliance on a well accessible, stable, level, dry, and suitable large table or counter. Do not place any cloth or tissue beneath or on the appliance, to avoid any risk of fire, electric shock and overheating. Always keep the table or counter clean and dry and immediately wipe off spilled liquids. Do not place the appliance near the edge of the table or counter or on inclined or wet surfaces or where it can fall.

• Do not place the appliance or any parts of it on or near hot surfaces (heater, gas burner, grill or oven).

• During operating, cakes, pastries or other food can fall to pieces and catch fire when over-heated. **Do not leave the appliance unattended, when connected to the power supply.** Always disconnect the appliance from the power supply, when the appliance is not in use and before cleaning or moving. Always allow the appliance to cool down before cleaning. Always grasp the appliance on its side handles for moving or lifting it.

• To stop toasting, turn toast browning control to OFF. To stop baking or broiling, turn the timer to 0.

• Never use abrasive cleaners, cleaning pads or any hard and sharp objects (i.e. metal scouring pads) for cleaning. Clean the Design Bistro Oven with a damped sponge or tissue and carefully dry the exterior of the appliance after cleaning. Do not handle the appliance or any part of it with violence. **Never place the appliance in an automatic dishwasher.**

• Do not immerse the Design Bistro Oven or power cord in water, or allow moisture to come in contact with the appliance. **Do not** insert any foreign objects in the oven and do not poke in the heating rod, to avoid risk of electric shock and damage of the heating elements.

If smoke comes out of the Design Bistro Oven, then immediately cancel the cooking process by opening the door of the Design Bistro Oven. Wait for the Design Bistro Oven to cool down, before carefully removing burned food. Ensure not to damage the heating elements.
Always operate the Design Bistro Oven with the crumb tray in place.

Hot Surfaces – Risk of Burns

• During operation do not place any objects or tissue on the appliance, to avoid risk of fire.

• The exterior of the Design Bistro Oven may gets hot during operation. Do not touch the exterior of the Design Bistro Oven while the appliance is in use. Always keep your hands, face and arm as well as any clothing and other heat-sensitive objects away from the Design Bistro Oven during operation.

Important Safeguards for Electrical Appliances

• Ensure that the voltage rating of your mains power supply corresponds to the voltage requirements of the appliance (220/240 V, 50 Hz, AC, rated for 16 A). Always connect the appliance directly to a separately protected mains power supply wall socket with protective conductor (earth/ground) connected properly. Before operation completely unwind the power cord. Do not use any extension cord or multi socket outlet.
The installation of a residual current safety switch with a maximum rated residual operating current of 30 mA in the supplying electrical circuit is recommended. If in doubt, contact your electrician for further information.

• Always handle the power cord with care. The power cord may never be knotted, twisted or squeezed. Do not pull or strain the power cord. Do not let the plug or power cord hang over the edge of the table or counter. Take care that no one will pull the appliance by the power cord, especially when young children are near. Always grasp the plug to disconnect the appliance from the power outlet. Do not touch the plug or appliance with wet hands, when the plug is connected to the power supply.

• **Always switch OFF and unplug the appliance when not in use and before moving or cleaning the appliance. Do not leave the appliance unattended while connected to the power supply.**

• Do not place the appliance or any parts of it on or near hot surfaces (heater, gas burner, grill or oven). Do not place the appliance on the power cord. If the power cord warms up during operation or is likely to be damaged, it must be replaced by an authorised service centre. Do not attempt to repair the power cord!

• Do not immerse the Design Bistro Oven or power cord in water or any other liquid. Do not spill or drip any liquids on the Design Bistro Oven or power cord to avoid risk of fire and electric shock. When liquids are spilled on the exterior of the appliance, immediately turn the appliance OFF, unplug the power cord and dry the appliance.

• **Do not place the appliance in an automatic dishwasher.**

First use

Unpack the appliance carefully and check, if there are any parts damaged or missing. **CAUTION:** It is important to carefully remove all packing and shipping materials as well as any price-tags, but do not remove any warning or model labels on the appliance. Ensure that there are no foreign objects (i.e. packing materials) inside the Design Bistro Oven before operating the appliance.

When using the Design Bistro Oven for the first time, you may notice a fine smoke haze, because of the first heating of some of the components. There is no need for concern. To prevent smell and taste of your food from being affected, you should heat the appliance on browning level 9 before placing any cakes and pastries in the slots (see: Operating Your Design Bistro Oven). If the burnt smell occurs again on later use, clean the Design Bistro Oven (see: 'Care and Cleaning'). If the burnt smell persists stubbornly even after thoroughly cleaning the appliance, return the appliance to an authorised service centre for examination and repair.

Operating Your Design Bistro Oven

WARNING: Always completely unwind the power cord, before connecting the appliance to the power supply. Ensure, that there are no foreign objects (i.e. shipping material) inside the Design Bistro Oven. Do not insert any foreign objects as knives, spoons, or other cooking utensils in the Design Bistro Oven, to avoid risk of fire, electric shock, burns or damage. Always handle with care, especially, when removing burned food.

Important: Ensure, that the crumb tray is in place before operating the Design Bistro Oven. Otherwise crumbs may become charred on the bottom of the Design Bistro Oven and stick to the surfaces.
Wash all parts as instructed in the Care and Cleaning section and insert the crumb tray.

Bake pan and broil rack

Crumb tray

Pizzapan

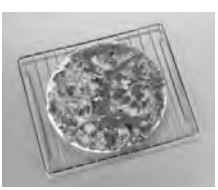

Slide rack

Using the handle

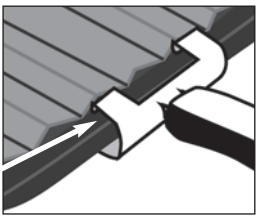

1.You can use the handle to hold the hot bake pan. Therefore you have to hook the handle onto the edge of the bake pan.

ATTENTION: Make sure that the handle is hooked on correctly. Otherwise it can cause injuries (view picture).

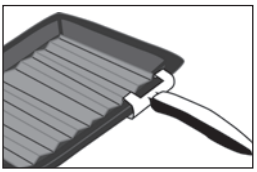

ATTENTION: Always hold the bake pan horizontal otherwise the bake pan will slide sideways and you will loose hold of the bake pan (view picture).

Toasting

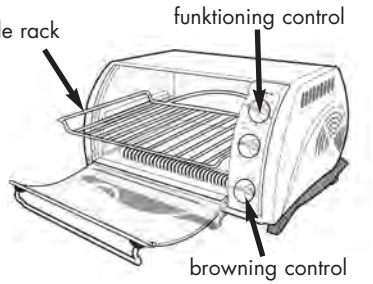

1. Insert the slide rack in the rack slot with the curved end towards the back of the oven. It is not necessary to preheat the oven for toasting.

2. Set the toast browning control as desired. For best results, select the medium setting for your first cycle, then adjust lighter or darker to suit your taste.

3. Turn functioning control to toast setting. Using the browning control the toasting only works when the functioning control is set on toasting. Using any other setting on the functioning control only the timer will be working but the toasting does not get started. The ON indicator light comes on and stays on during the toasting cycle. When toasting is done, you hear a bell sound. The heating elements turn off automatically and the ON indicator light goes out.

4. To stop toasting at any time, open the oven door. The heating elements and the ON indicator light go out. If you want to continue toasting just close the door of the oven.

5. Turn the toast browning control to OFF.

6. Using an oven mitt or pot holder, open the door and slide out the slide rack to remove food.

ATTENTION: The oven is hot. Do not let your skin touch any surface.

Baking

1. Place bake pan or pizza pan containing food to be cooked on the slide rack.

2. Turn the functioning control to the desired temperature setting and the timer to the desired number of minutes. The ON indicator light comes on and stays on during the

baking cycle. When baking is done, you hear a bell sound. The heating elements turn off automatically and the ON indicator light goes out.

NOTE: The functioning control setting has to be on bake/broil or a temperature otherwise only the browning control is working. This way you can not bake or broil.

NOTE: For best results, always preheat the oven for 5 minutes.

3. The upper and lower heating elements will cycle on and off to maintain the temperature. To stop cooking, open the oven door. To continue cooking, close the door. Check food for doneness at minimum time.

4. When finished cooking, you will hear a bell sound once the timer reaches the set time. If not, when cooking is done, turn the timer to 0 (OFF). The heating elements will turn off an the ON indicator light goes out.

6. Using an oven mitt or pot holder, open the door and slide out the slide rack to remove the bake pan.

ATTENTION: The oven is hot. Do not let your skin touch any surface.

Broiling

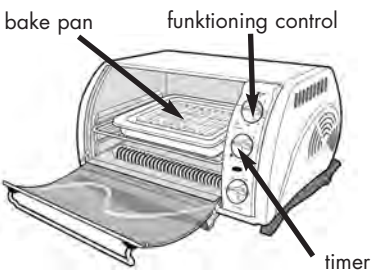

1. Insert the broil rack in the bake pan and place both on the slide rack (B).

2. Turn the functioning control to broil and the timer control to the desired time. The oven does not need to be preheated for broiling. The ON indicator light comes on and stays on during the broiling cycle.

3. To stop cooking, open the door. To continue cooking, close the door. Check food for doneness at minimum time. When broiling is done, you hear a bell sound. The heating elements turn off automatically and the ON indicator light goes out.
For the case that your food is done earlier, turn the timer to 0 (OFF). The heating elements will turn off an the ON indicator light goes out.

4. When finished broiling, using an oven mitt or pot holder, slide out slide rack to remove bake pan. Using the handle you should pay attention that the handle is properly hooked into the bake pan.

CAUTION: The oven is hot. Do not let you skin touch any surface.

Tips for using

• You can interrupt the cooking, by opening the oven door. To continue cooking, close the door.

• The right browning time depends on the freshness and consistency of the food as well as your taste.

• When cooking is done, turn the timer to 0 (OFF).

WARNING: The oven is hot. Do not let your skin touch any surface.

• Empty the crumb tray after every use and clean the bake pan and broil rack. This way you can be sure that no leftover food is getting burned or set on fire.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Turn off unit, unplug from wall outlet and let it cool before cleaning.

2. Clean the glass door with a nylon pad and sudsy water. Do not use a spray glass cleaner.

3. To remove slide rack, open the door, pull the rack forward and out. Wash in warm, sudsy water or in the dishwasher. To remove stubborn spots, use a polyester or nylon pad. To replace the slide rack, open the door completely, slide into the rack slot and close the door.

4. Wash the bake pan and broil rack in warm, sudsy water or in the dishwasher. To minimise scratching, use a polyester or nylon pad.

5. To remove the crumb tray, grasp the handle at the front of the oven and pull it out. Dispose the crumbs and wash the tray in warm, sudsy water. **ATTENTION:** Do **not** clean the crumb tray in the dishwasher. Remove stubborn spots with a nylon mesh pad. Be sure to dry thoroughly before inserting the tray back into the oven.

Nonstick Coating

1. Unplug the oven and let it cool, then wipe with a soapy sponge or nylon pad after each use.

2. Do not use a chemical oven cleaner. Do not use any abrasive cleaners or scouring pads as they may harm the coating. Dry with paper towel or soft cloth.

Exterior

Let the oven cool completely before cleaning any outer surface. Wipe with a damp cloth or sponge and dry with paper towel or soft cloth.

Cooking Containers

Metal, ovenproof glass without lids or ceramic bakeware can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1" (2.54 cm) away from the upper heating elements.

Storage

Store the entire appliance on a clean and dry surface, where it may not tilt or fall and no other objects could fall on it and where it is safe from frost and inadmissible strain (mechanical or electric shock, heat, moisture, direct sunlight) and where it is out of reach of young children. Do not place any hard or heavy objects on the appliance or any parts of it.

Always switch OFF the appliance and unplug the power connector, if the appliance is not in use.

If the appliance is not in use for a long period of time, clean the appliance before storage (see 'Care and Cleaning').

Waste disposal

Dispose of the appliance must be effected in accordance with the corresponding local regulations and requirements for electrical appliances. Please contact your local disposal company.

Warranty

We guarantee that all our products are free of defects at the time of purchase.
Any demonstrable manufacturing or material defects will be to the exclusion of any further claim and within 2 years after purchasing the appliance free of charge repaired or substituted.
There is no Warranty claim of the purchaser if the damage or defect of the appliance is caused by inappropriate treatment, over loading or installation mistakes.
The Warranty claim expires if there is any technical interference of a third party without an written agreement.
The purchaser has to present the sales slip in assertion-of-claims and has to bear all charges of costs and risk of the transport.

GASTROBACK GmbH
Gewerbestraße 20
D-21279 Hollenstedt/Germany

http://www.gastroback.de
E-Mail: info@gastroback.de